

# Firmware upgrade guide



 **SERSTECH**  
Chemical identification for a safer world ■

# Firmware upgrade guide

## ⏪ How to upgrade – new Firmware and Data Management Tool (DMT)

➡ Start with logging into your Indicator and activating its USB mode:

➡ Settings->Administration->USB->Activate USB Conf

➡ Note! You need to have the read and write privileges to access “USB Conf” and do the updates. This can be set by the admin user.

➡ Connect the Indicator to your computer

➡ Download the latest Firmware from Serstech’s website and save it on your computer, not on an USB stick, that can sometimes create conflicts

➡ There are two alternative methods for the update:


1. Via DMT, or
2. Via “drag and drop”



# Firmware upgrade guide

## Method 1: Upgrade through DMT


Download the latest version from Serstech's website

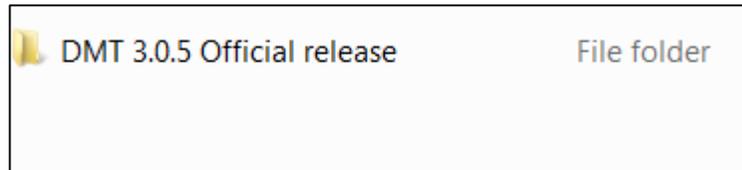

Choose "Mac Install" or "Windows Setup"





You might need to extract the files

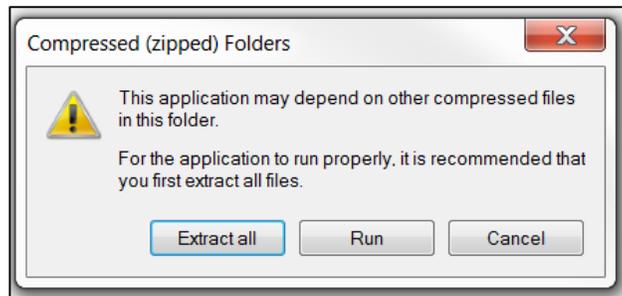

# Firmware upgrade guide





➡ Double-click on the Installer you want to start

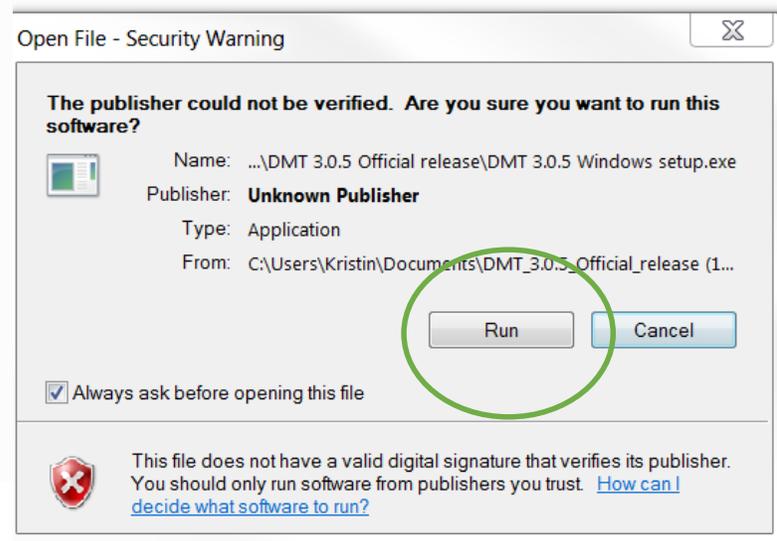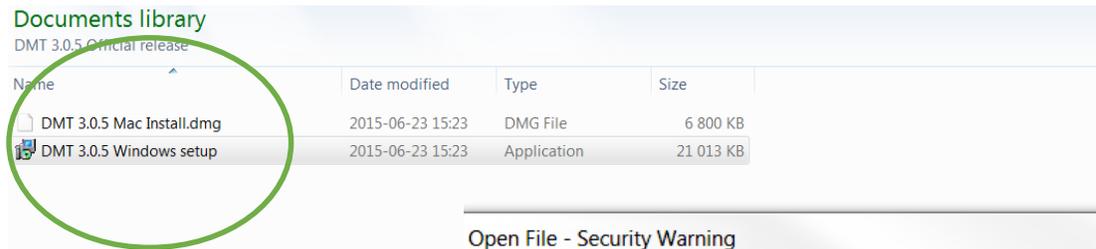

➡ Run the Installer

# Firmware upgrade guide

➡ Follow the steps with the Data Management Tool Setup Wizard

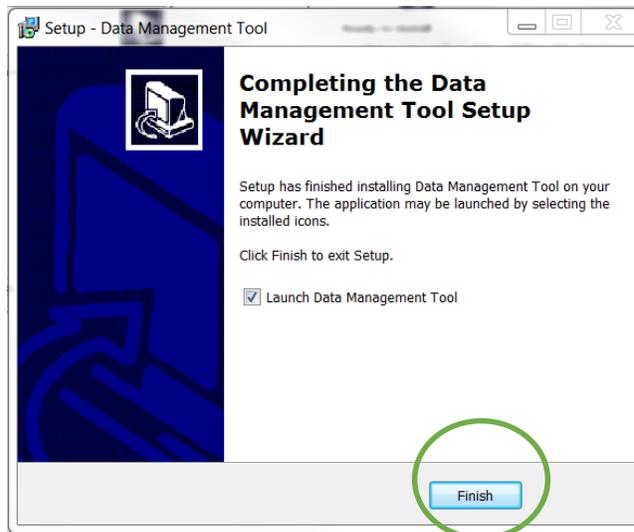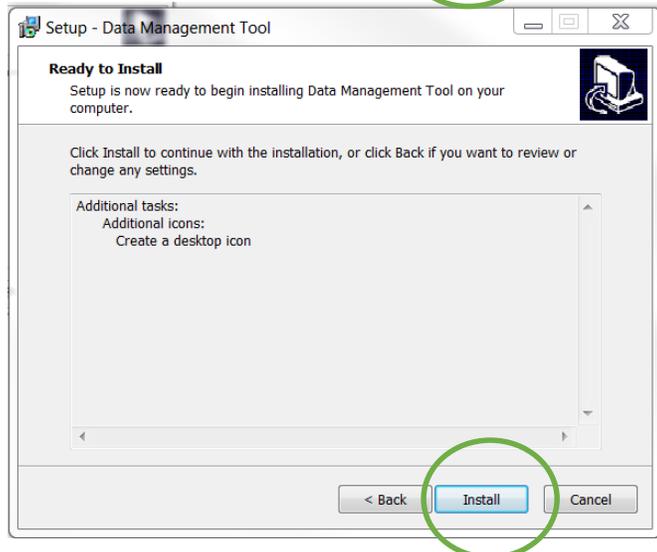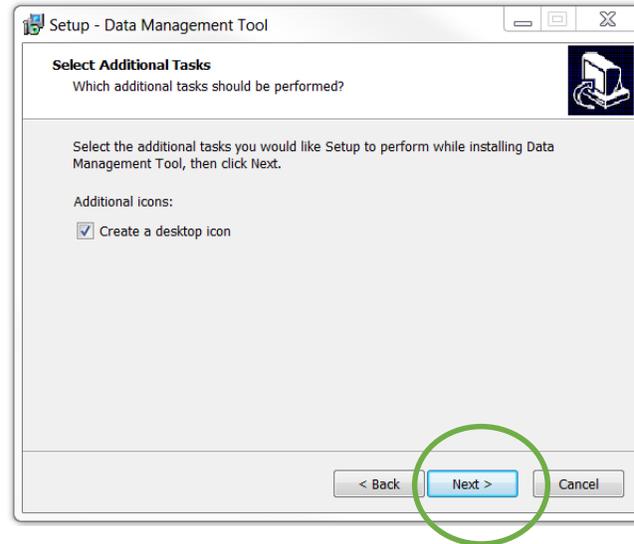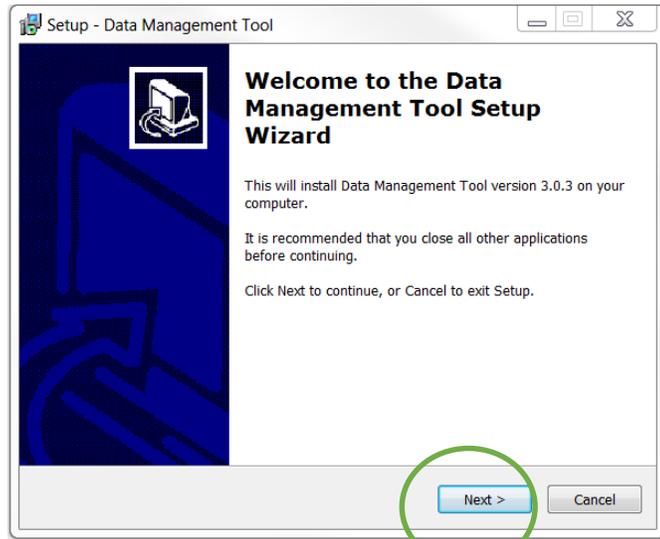

# Firmware upgrade guide

➡ You can fill out the registration form, click accept and continue

Registration DMT 3.0.5

**Serstech 100 Indicator  
Data Management Tool (DMT) Version 3.0  
Copyright & Disclaimer**

**Please note that this software is designed for the Serstech 100 Indicator running firmware 3.0.3 or later. If you are presently using an earlier firmware release, please upgrade the instrument before proceeding with the registration of DMT version 3.0!**

Copyright ©2014-2015 Face3 International Pte Ltd ("Face3"). All Rights Reserved.

Permission to distribute and use this software and its documentation for the specific purpose of managing the Serstech 100 Indicator, without a signed licensing agreement, is hereby granted, provided that the above copyright notice, this paragraph and the following two paragraphs appear in all distributions. Any other use, copying, modification, reverse engineering or distribution of this software is strictly prohibited.

IN NO EVENT SHALL FACE3 BE LIABLE TO ANY PARTY FOR DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, INCLUDING LOST PROFITS, ARISING OUT OF THE USE OF THIS SOFTWARE AND/OR ITS DOCUMENTATION, EVEN IF FACE3 HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

FACE3 SPECIFICALLY DISCLAIMS ANY WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE SOFTWARE AND ACCOMPANYING DOCUMENTATION, IF ANY, PROVIDED HEREUNDER IS PROVIDED "AS IS".

Fullständigt namn  Serie nummer (från etikett på baksida)

Företag/Organisation  Land


Email  Telefon

Denna information kommer att skickas till Face3 International som registreringsunderlag samt som hjälp vid support årenden. Informationen

Jag har läst "Disclaimer".


# Firmware upgrade guide

➡ Click on “About an Upgrade”

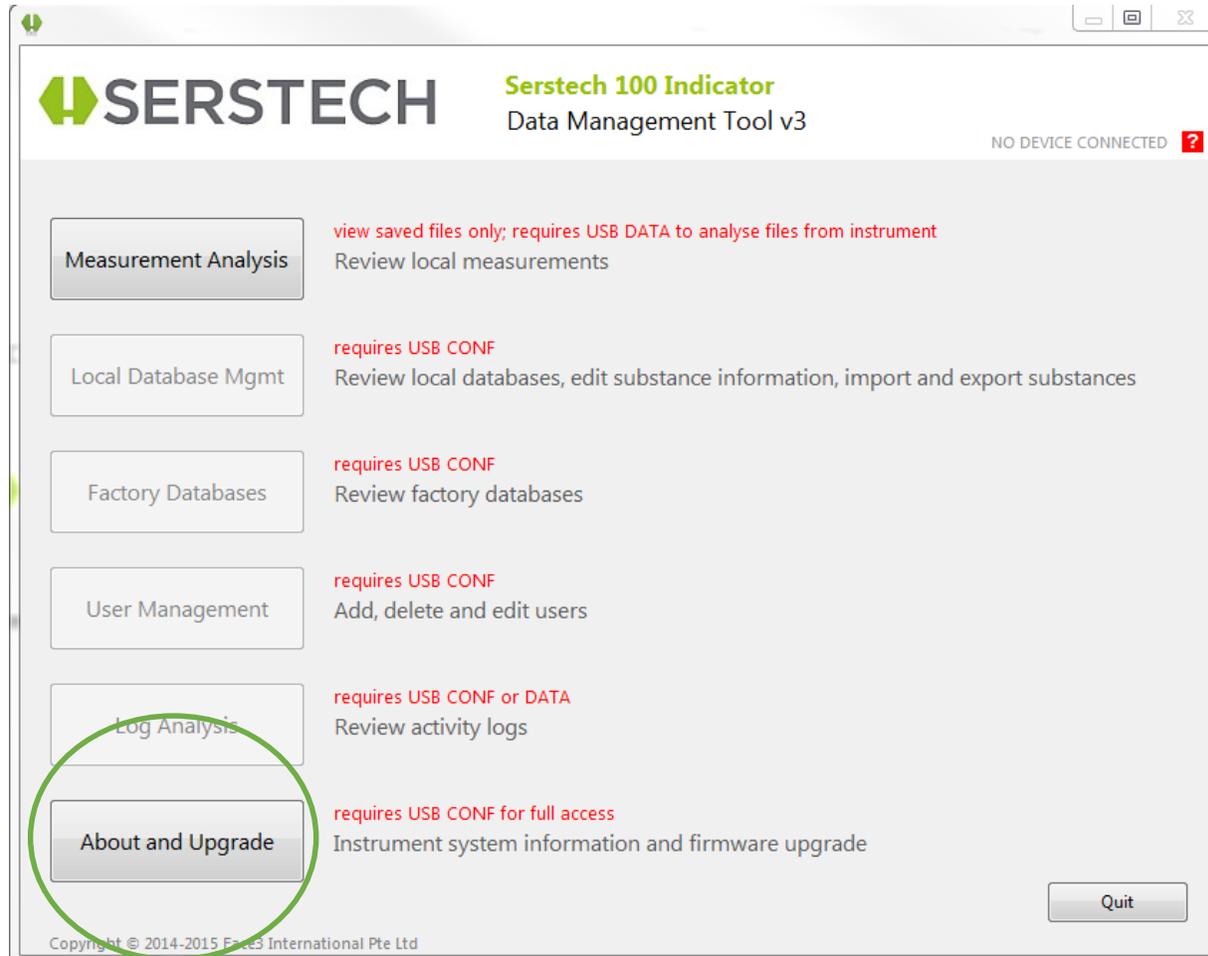


# Firmware upgrade guide

➡ Click on “Instrument Upgrade”

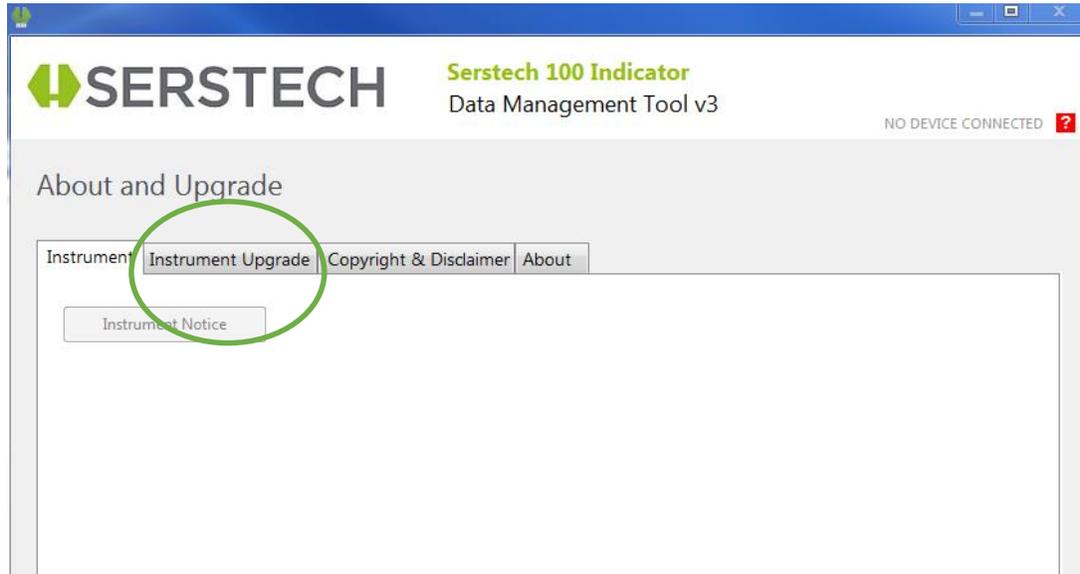


➡ Choose the file with the latest firmware version (the one you downloaded before from Serstech’s website)

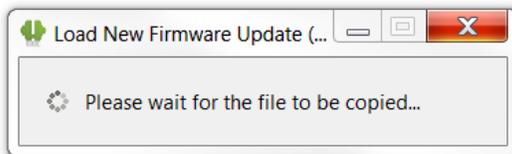

# Firmware upgrade guide

- ↔ Deactivate USB, unplug from your computer and restart the Indicator

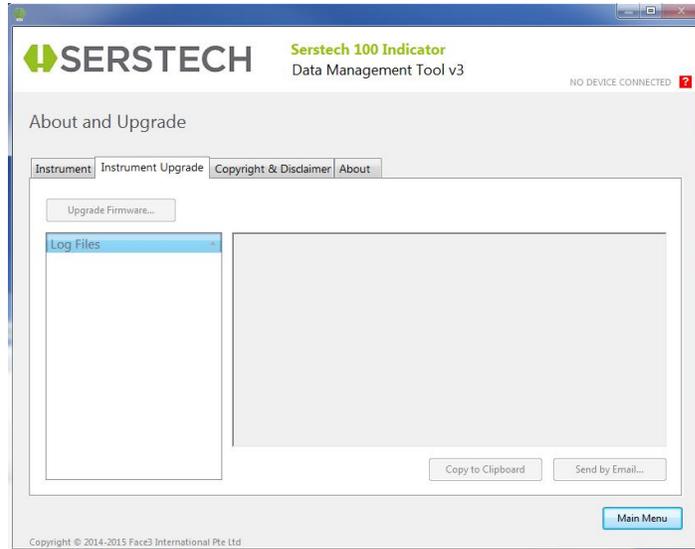

- ↔ Your installation is now completed.
- ↔ To see which Firmware version you have, turn on your Indicator, go to Setting -> About.

# Firmware upgrade guide

## Method 2: Upgrade with the “drag and drop” function

- ⚡ Start with logging into your instrument and connect your USB:
  - ⚡ Settings->Administration->USB->Activate USB Conf) Note! You need to have the read and write privileges to access USB Conf and do the updates. This can be set by the admin user.
- ⚡ Connect the instrument to your computer
- ⚡ Look for the P3-Conf in your file browser
- ⚡ Download the latest Firmware from Serstech’s website and save it on your computer, not on a USB stick, that can sometimes create conflicts
- ⚡ Choose the right file “Mac Install” or “Windows Setup”
- ⚡ Drag and drop the file in the folder “updates” in your instrument
- ⚡ Deactivate USB, unplug from your computer and restart the instrument
- ⚡ You have now finished the update
- ⚡ To see which Firmware version you have, turn on your instrument, go to Setting -> About.