


Get started – connect to ChemDash using the network connection kit

Wired connection – Ethernet

■ **1. Please upgrade your Serstech 100 Indicator to software 4.x, otherwise ChemDash cannot be connected.** If your Indicator runs an older version please upgrade the software first by following the instructions in the Software Upgrade Guide on serstech.com.

■ The Network connection kit content

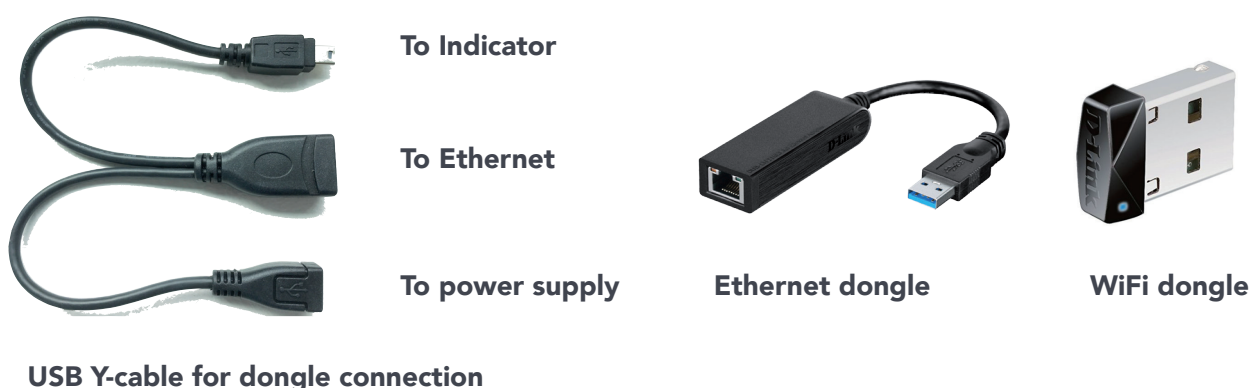

■ 2. Connect USB Y-cable as shown



Get started – connect to ChemDash using the connection kit

Wired connection – Ethernet

- 3. Wait until the arrow appears on the Indicator cloud icon.



- 4. Go to www.chemdash.com and login with the login default you have received by email from Serstech.

Find your device by it's serial number (shown on the backside of the instrument) in the Device Management with a green online status.

SERSTECH

Home Devices Data ▾

Home / Devices

Device Management

	Device ↑	Device Tag	Status	Last Seen	Model	Software Version	Calibration Date
	Q		Q	Q	Q	Q	Q
Device ▾	0000000000060		Online	2016-05-23 14:05	Serstech 100 Indicator	4.0.2	2016-05-23 07:49
Device ▾	0000000000089		Offline	2016-05-23 12:43	Serstech 100 Indicator	4.0.2	2016-04-25 12:33

